

PEBBLES

NATURAL STONE

Pietra Viva



floridatile

Pietra Art
PEBBLES
BY *floridatile*

Fondly looking back on childhood memories of wading in ponds and streams, the feel of the smooth stones beneath your feet. This is the inspiration for the latest Florida Tile PietraArt Pebbles product line. Now you can bring back those memories to your own living space. This new collection of pebble mosaics is truly a unique product, with each being handmade by highly trained artisans. The smooth natural stones are offered in both round and flat surfaces in a 12x12 size and perfectly suitable for floor and wall installations. Decorative trim options are available in a 6x12 round version and a 4x12 standing pattern. For more information, please visit www.floridatile.com

Standing Pebbles 4 x 12




Round Pebbles 6 x 12



SP104/4x12 Mixed Salad Standing

PT104/6x12 Mixed Salad Round

Round Pebbles 12 x 12

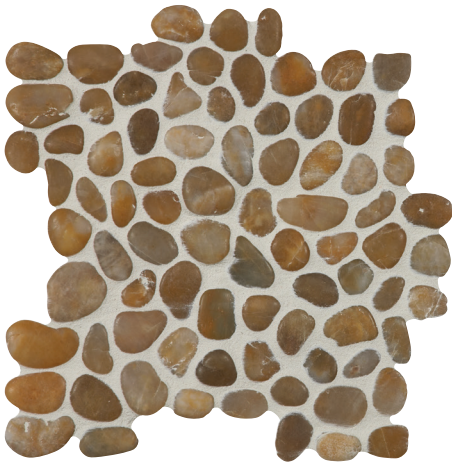

PT101/12x12 Yellowstone Round

PT102/12x12 Black Pearl Round

PT103/12x12 White Snowball Round



PT104/12x12 Mixed Salad Round



SHOWN: FP306/12x12 Cotton Flat

Flat Pebbles 12 x 12



FP306/12x12 Cotton Flat



FP102/12x12 Black Pearl Flat



FP103/12x12 White Snowball Flat




FP104/12x12 Mixed Salad Flat



FP105/12x12 Redwood Flat

Round & Flat Pebble Mosaic Installation

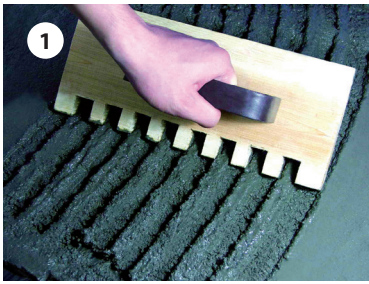


1. SPREAD & COMB MIXED THIN-SET to an area not more than 6 square feet at a time.



2. SET THE TILE in thin-set, cut the tile to fit the edge, make sure the tile joints fit tightly.



3. GENTLY TAMP DOWN THE TILE, it is important that each pebble is embedded in thin-set.

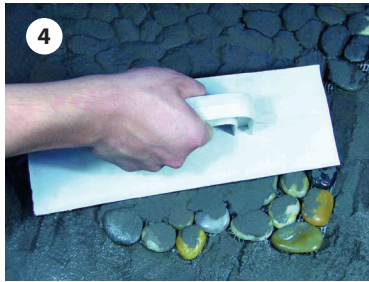

4. APPLY GROUT all over the tiles.




5. WAIT 15 MINUTES OR FOLLOW THE INSTRUCTIONS, remove excess grout with a sponge, repeat sponging off until desired finish is reached.



6. SEAL THE TILES after the grout has been completely cured.


Standing Pebble Mosaic Installation

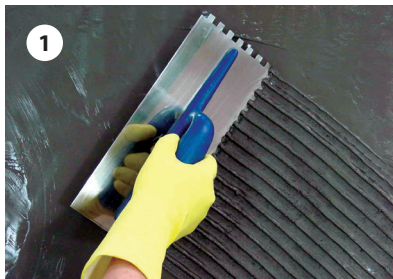

1. SPREAD & COMB MIXED THIN-SET to an area not more than 6 square feet at a time.



2. SET THE TILE IN THIN-SET, it is crucial to alternate and stagger the pieces in each row so that seams do not line up from one row to the next.

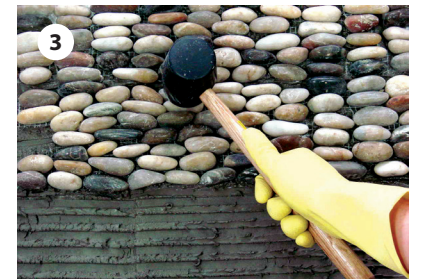

3. GENTLY TAMP DOWN THE TILE, it is important that each pebble is embedded in thin-set.



4. USE A GROUT BAG TO FILL spots where mesh may be seen from the top.



5. SEAL THE TILES with professional grade sealant following installation.



6. ALLOW sealant to cure before use.

floridatile